

AIDEN WARDROBE LIFT INSTALLATION INSTRUCTION

Accessories list as below

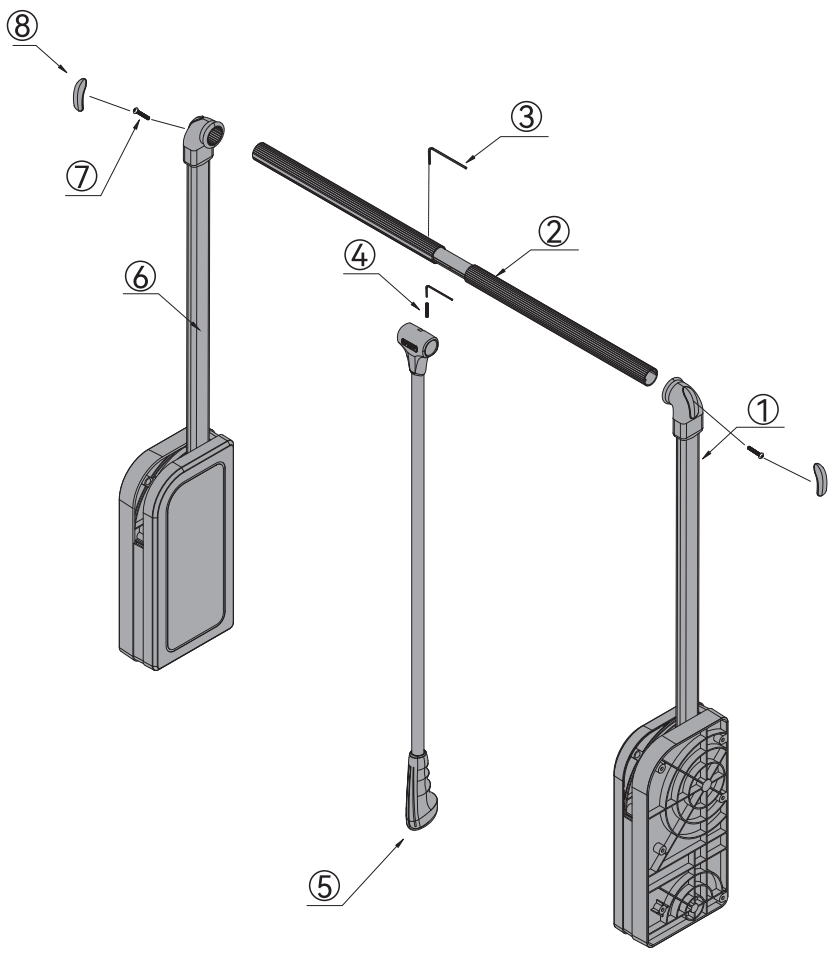

No.	①	②	③	④	⑤	⑥	⑦	⑧
DESC.	Lifting hanger assembly (right)	Middle rod assembly	M3 Allen key	M4 screw	Pull handle assembly	Lifting hanger assembly (left)	M6 Fixing screw	Decorative cover
QTY	1	1	1	1	1	1	2	2


Product installation dimention

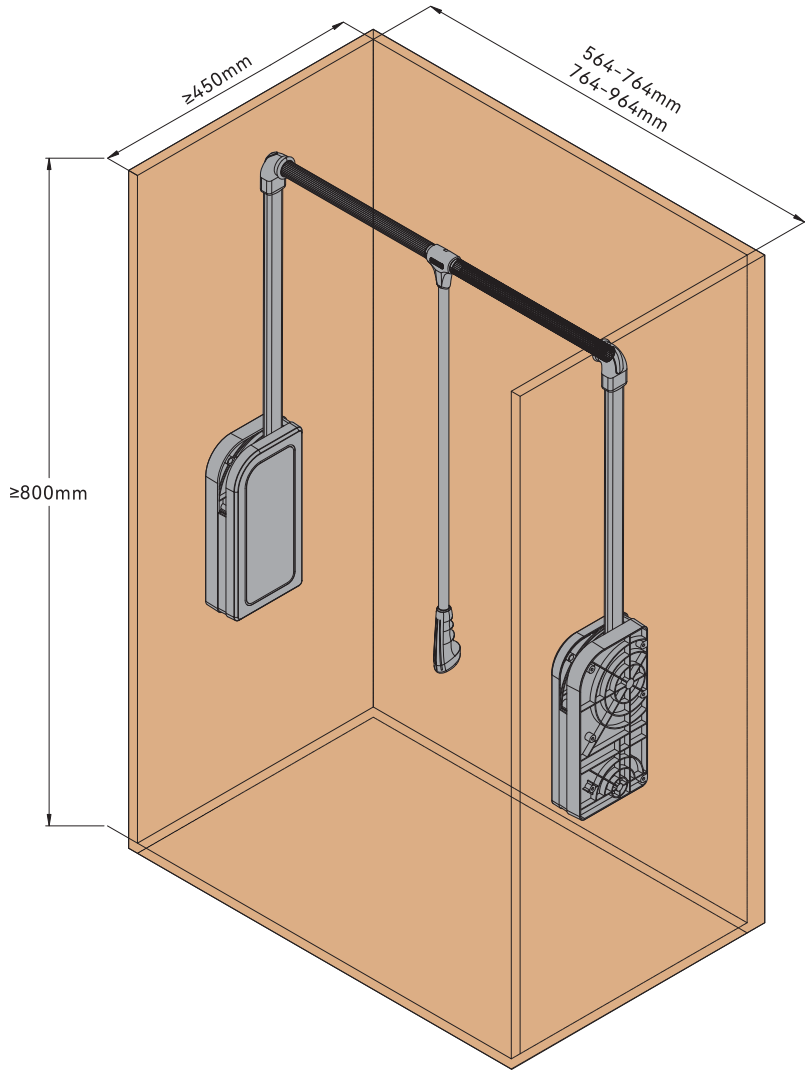


①

Step1: install the left lifting hanger assembly

Installation of left lifting hanger assembly:
Method One: Positioning to insall

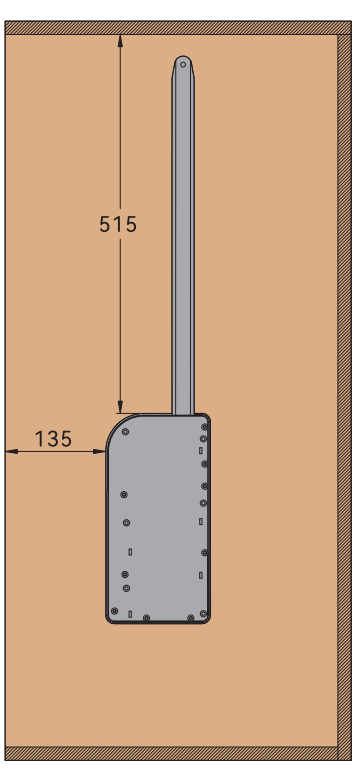


Installation of left lifting hanger assembly:
Method Two: Pre-drilling hole to install

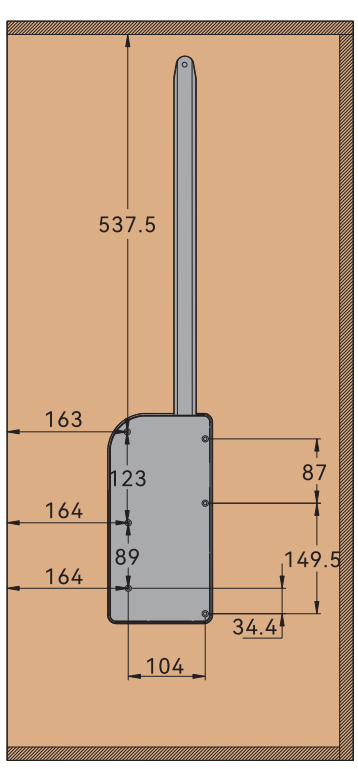


②

Step2: install the right lifting hanger assembly

Installation of right lifting hanger assembly:
Method One: Positioning to insall

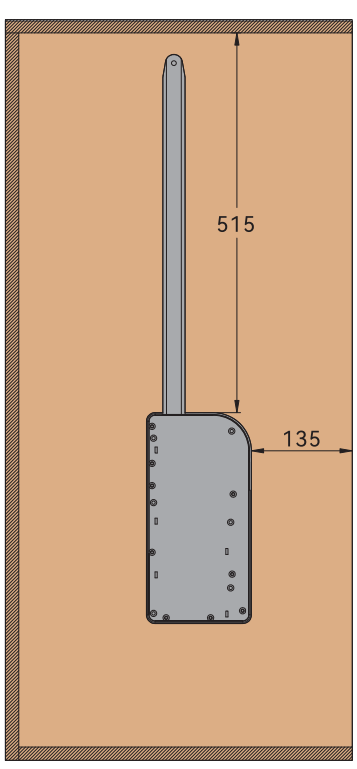


Installation of right lifting hanger assembly:
Method two: Pre-drilling hole to install

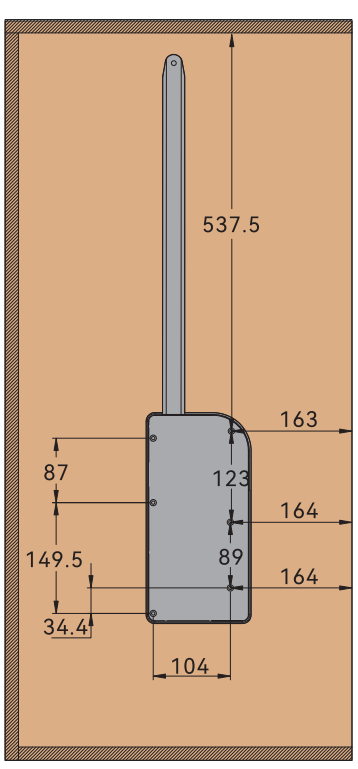


③

Step3: Install pull handle assembly

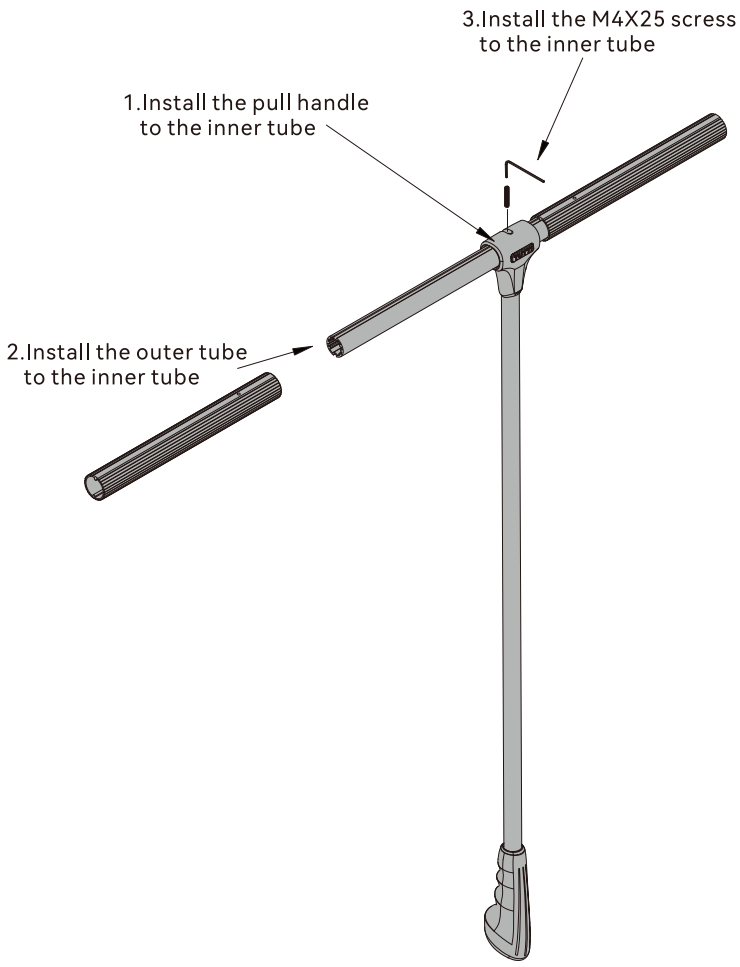


Step4: install the left and right lifting hanger and the pull handle assembly together

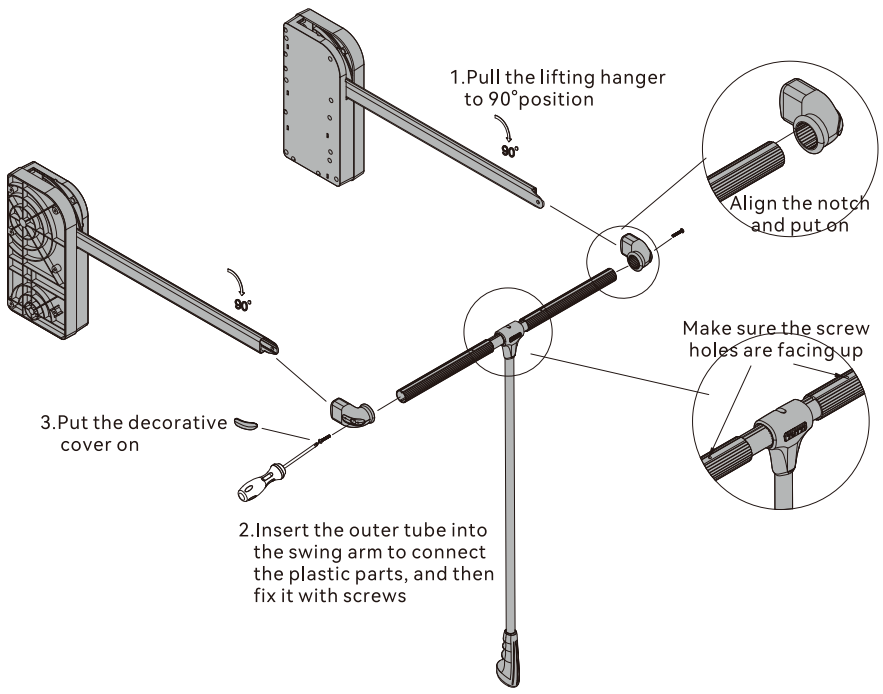

Step5

Center the handle, adjust the length of the outer tube according to the size of the cabinet, and then fix the crews

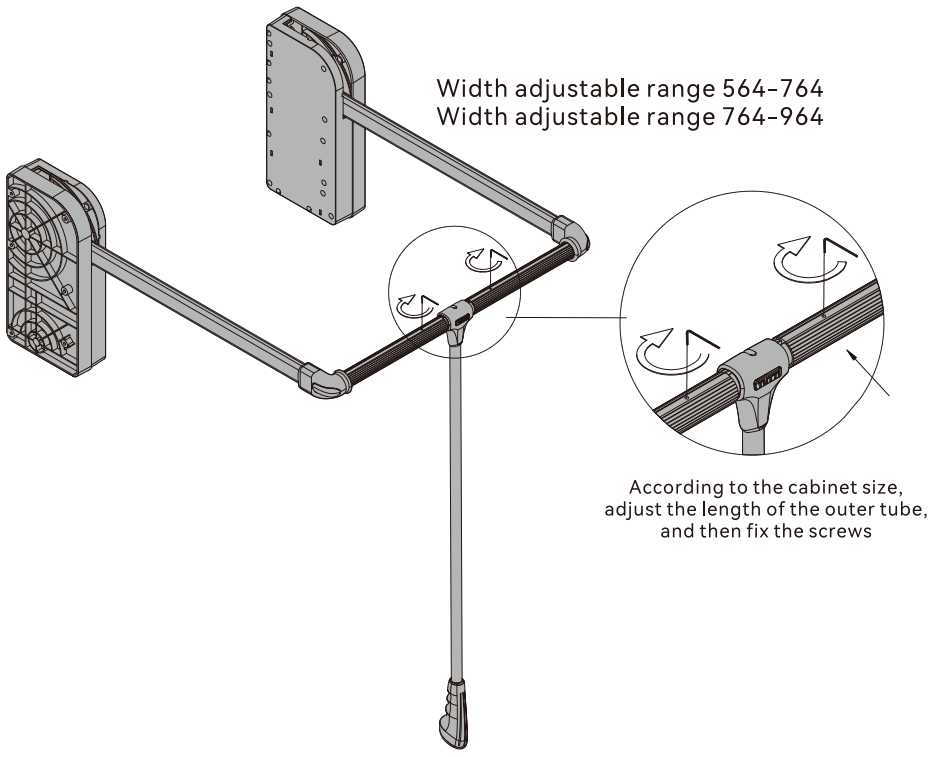

Step6

Pull down two or three times, after the product can be used normally, install the decorative cover.

